



ENGLISH

فارسی

# OWNER'S MANUAL

# AIR CONDITIONER

Please read this manual carefully before operating your set and retain it for future reference.

TYPE : WALL MOUNTED



P/NO : MFL68782605

[www.lg.com](http://www.lg.com)

## 2 TIPS FOR SAVING ENERGY

**TIPS FOR SAVING ENERGY**

Here are some tips that will help you minimize the power consumption when you use the air conditioner. You can use your air conditioner more efficiently by referring to the instructions below:

- Do not cool excessively indoors. This may be harmful for your health and may consume more electricity.
- Block sunlight with blinds or curtains while you are operating the air conditioner.
- Keep doors or windows closed tightly while you are operating the air conditioner.
- Adjust the direction of the air flow vertically or horizontally to circulate indoor air.
- Speed up the fan to cool or warm indoor air quickly, in a short period of time.
- Open windows regularly for ventilation as the indoor air quality may deteriorate if the air conditioner is used for many hours.
- Clean the air filter once every 2 weeks. Dust and impurities collected in the air filter may block the air flow or weaken the cooling / dehumidifying functions.

*For your records*

Staple your receipt to this page in case you need it to prove the date of purchase or for warranty purposes. Write the model number and the serial number here:

Model number : \_\_\_\_\_

Serial number : \_\_\_\_\_

You can find them on a label on the side of each unit.

Dealer's name : \_\_\_\_\_

Date of purchase : \_\_\_\_\_

# IMPORTANT SAFETY INSTRUCTIONS

## **READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE.**

Always comply with the following precautions to avoid dangerous situations and ensure peak performance of your product

### **WARNING**

It can result in serious injury or death when the directions are ignored

### **CAUTION**

It can result in minor injury or product damage when the directions are ignored

### **WARNING**

- Installation or repairs made by unqualified persons can result in hazards to you and others.
- Appliance shall be installed in accordance with national wiring regulations.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The information contained in the manual is intended for use by a qualified service technician familiar with safety procedures and equipped with the proper tools and test instruments.
- Failure to carefully read and follow all instructions in this manual can result in equipment malfunction, property damage, personal injury and/or death.
- When the power cord is to be replaced, replacement work shall be performed by authorized personnel only using only genuine replacement parts.

### Installation

- Use a standard circuit breaker and fuse conforming with the rating of the air conditioner. Failure to do so may result in electric shock or product failure.
- Contact an authorized service center when you install or relocate the air conditioner. Failure to do so may result in serious injury or product failure.
- Always use a power plug and socket with a ground terminal. Failure to do so may result in electric shock or product failure
- Install the panel and the cover of the control box safely. Failure to do so may result in explosion or fire.
- Install a dedicated electric outlet and circuit breaker before you use the air conditioner. Failure to do so may result in electric shock or product failure.
- Use a standard circuit breaker and fuse conforming with the rating of the air conditioner. Failure to do so may result in electric shock or product failure.
- Do not modify or extend the power cable. If the power cable or cord has scratches or skin peeled off or deteriorated then it must be replaced. It may result in fire or electric shock.
- Be cautious when you unpack or install the air conditioner. Failure to do so may result in serious injury or product failure.
- Do not install the air conditioner on an unstable surface or where there may be a danger of falling. It may result in death, serious injury, or product failure.
- Use inflammable gas (nitrogen) to inspect leak and to purge air, using compressed air or inflammable gas may cause fire or explosion.

## 4 IMPORTANT SAFETY INSTRUCTIONS

### Operation

- Do not let the air conditioner run for a long time when the humidity is very high or when a door or window has been left open. Failure to do so may result in product failure.
- Make sure that the power cord is not pulled or damaged while the air conditioner is operating. Failure to do so may result in fire, electric shock, or product failure.
- Do not place any objects on the power cord. It may result in electric shock or product failure.
- Do not turn on or off the air conditioner by plugging in or unplugging the power plug. It may result in fire or electric shock.
- Do not touch, operate or repair the air conditioner with wet hands. It may result in electric shock or product failure.
- Do not place a heater or other heating appliances near the power cable. It may result in fire, electric shock, or product failure.
- Do not allow water to run into the air conditioner. It may result in explosion or fire.
- Do not leave flammable substances such as gasoline, benzene and thinner near the air conditioner. It may result in explosion or fire.
- Do not use the air conditioner for an extended period of time in a small place without ventilation. Ventilate the place regularly. Failure to do so may result in explosion or fire.
- When there is a gas leak, ventilate sufficiently before using the air conditioner again. Failure to do so may result in explosion or fire.
- Unplug the power plug if there is a noise, smell or smoke coming from the air conditioner. Failure to do so may result in explosion or fire.
- Stop operating and close the window in storm or hurricane. If possible remove the product from the window before hurricane arrives
- Do not touch the electrostatic filter after opening the front grille. Failure to do so may result in electric shock or product failure.
- Contact an authorized service center when the air conditioner is submerged into water due to flooding. Failure to do so may result in explosion or fire.
- Be cautious water could not enter the product
- Make sure to ventilate sufficiently when this air conditioner and a heating appliance such as a heater are used simultaneously. Failure to do so may result in fire, serious injury, or product failure.
- Turn the main power off and unplug the power plug when you clean or repair the air conditioner. Failure to do so may result in death, serious injury, or product failure.
- Unplug the power plug when the air conditioner is not used for an extended period of time. Failure to do so may result in product failure.
- Do not place any objects on the air conditioner. It may result in product failure.
- For inner cleaning, contact an Authorized Service Center or a dealer.  
Do not use harsh detergent that causes corrosion or damage on the unit.  
Harsh detergent may also cause failure of product, fire, or electronic shock.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.



## CAUTION

### Installation

- Make sure to check if there is a refrigerant leak after you install or repair the air conditioner. Failure to do so may result in product failure.
- Install the drain hose properly for smooth drainage of condensed water. Failure to do so may result in product failure.
- Keep level even when installing the product.
- Install the air conditioner where the noise from the outdoor unit or the exhaust gas will not be inconvenient to the neighbors. Failure to do so may result in conflict between neighbors.
- When transporting the equipment, there should be at least 2 or more people, or a forklift. It may result in serious injury.
- Do not install the air conditioner where it is exposed to sea wind (salt spray) directly. It may result in product failure.

### Operation

- Do not expose people, animals or plants to the cold or hot wind from the air conditioner. It may result in serious injury.
- Do not use the product for special purposes, such as preserving foods, works of art, etc. It is a consumer air conditioner, not a precision refrigeration system. It may result in death, fire or electric shock.
- Do not block the inlet or outlet of air flow. It may result in explosion or product failure.
- Do not use strong cleaning agents or solvents when you clean the air conditioner, or spray water. Use a smooth cloth. It may result in serious injury or product failure.
- Never touch the metal parts of the air conditioner when you remove the air filter. It may result in serious injury or product failure.
- Do not place any objects on the air conditioner. It may result in product failure.
- Always insert the filter securely after cleaning. Clean the filter every two weeks or more often if necessary.
- Do not insert hands or other objects through the air inlet or outlet while the air conditioner is operating. It may result in electric shock.
- Do not drink the water drained from the air conditioner. It may result in serious health complications.
- Use a sturdy stool or ladder when you clean, maintain or repair the air conditioner at a height. Failure to do so may result in serious injury or product failure.
- Do not mix the batteries for the remote control with other types of batteries or mix new batteries with used batteries. Failure to do so may result in product failure.
- Do not recharge or disassemble the batteries. Failure to do so may result in explosion, fire or serious injury.
- Stop using the remote control if there is a battery fluid leak. If your cloth or skin is exposed to the battery fluid from a leak, wash it off with clean water. Failure to do so may result in serious injury.
- If you swallow the battery fluid from a leak, wash out the inside of your mouth thoroughly and then consult a doctor. Failure to do so may result in serious health complications.

## Operation ranges

The table below indicates the temperature ranges the air conditioner can be operated within.

Capacity	Mode	Indoor temperature	Outdoor temperature
2.5~3.5 kW	Cooling	18 °C~30 °C	21 °C~48 °C
	Heating	16 °C~30 °C	1 °C~24 °C
5.3~6.4 kW	Cooling	18 °C~30 °C	21 °C~54 °C
	Heating	16 °C~30 °C	1 °C~24 °C

## 6 TABLE OF CONTENTS

**TABLE OF CONTENTS****7 BEFORE USE**

- 7 Components
- 8 Using the remote control

**10 BASIC FUNCTIONS**

- 10 Cooling your room
- 10 Heating your room
- 10 Removing humidity
- 11 Airing your room
- 11 Adjusting the fan speed
- 11 Adjusting the air flow direction
- 11 Setting the timer

**13 ADVANCED FUNCTIONS**

- 13 Changing room temperature quickly
- 13 Indoor air purification
- 14 Plasmaster Purification operation (optional)
- 14 Auto Changeover operation
- 15 Energy Saving cooling mode
- 15 Display screen brightness
- 15 Using the Comfort air
- 16 Operating the air conditioner without the remote control
- 16 Restarting the air conditioner automatically

**17 MAINTENANCE**

- 18 Clean the air filter
- 18 Assemble the air filter


**20 TROUBLESHOOTING**

- 20 Self-diagnosis function
- 20 Before requesting service

## BEFORE USE

### Components

#### Indoor unit

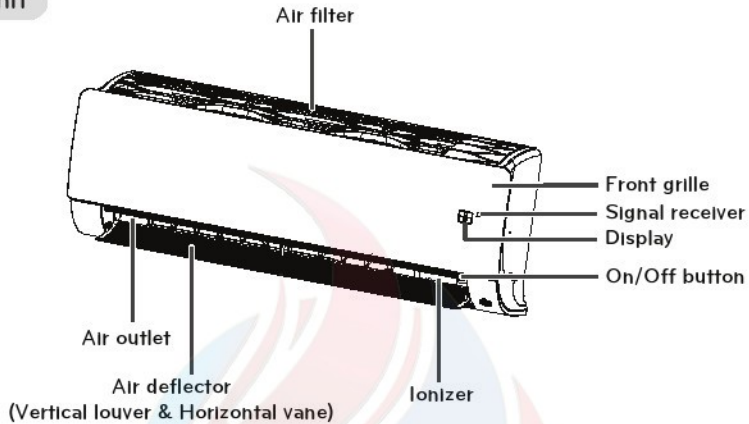


\* The feature can be changed according to the type of model.

#### NOTE

The number of operation lamps and their locations may vary, depending on the model of the air conditioner.

#### Outdoor unit

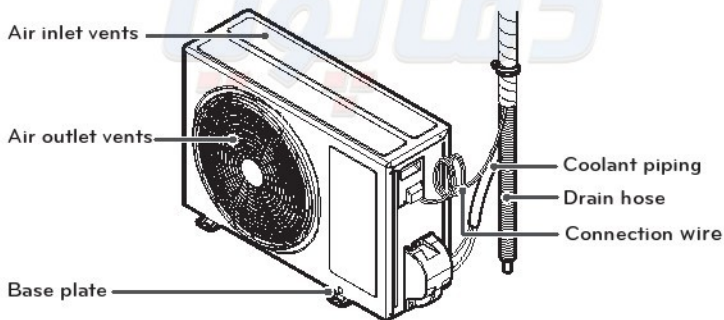




 













 
 



 



\* The feature can be changed according to type of model.

## 8 BEFORE USE

## Using the remote control

You can operate the air conditioner more conveniently with the remote control.

Wireless remote control		Control panel	Display screen	Description
				IONIZER button*: Ionizer sterilize the aerial bacteria and other harmful substances.
				Comfort air button : Easily adjust the air flow to deflect direct wind away.
				Sleep mode auto button*: Sets the sleep mode auto operation.
				Temperature adjustment buttons: Adjusts the room temperature when cooling and heating.
	-			On/Off button: Turns the power on/off.
				Indoor fan speed button: Adjusts the fan speed.
				Operation mode selection button*: Selects the operation mode. Cooling operation (❄️) / Auto changeover (🔄) / Dehumidifying operation (💧) / Heating operation (🔥) / Air circulation (🌀)
				Jet cooling/heating button*: Warms up or cools down the indoor temperature within a short period of time.
				Air flow direction button: Adjusts the air flow direction vertically or horizontally.
				Temperature display button: Displays the room temperature.
				Timer button: Sets the start / end time.
				Function buttons* : Set the special functions. 🔄 : Auto clean 🌞 : Energy saving cooling operation.
	-			Adjusts the brightness of the indoor unit display
	-			Set/clear button: Sets or cancels functions. Also set the current time if held for 3 seconds.
	-			Reset button: Resets the air conditioner settings.


\* Some functions may not be supported, depending on the model.




### Inserting batteries

Insert batteries before using the remote control. The battery type used is AAA (1.5 V).

- 1 Remove the battery cover.

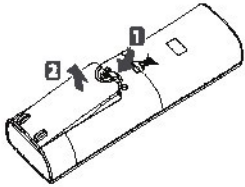

- 2 Insert the new batteries and make sure that the + and - terminals of the batteries are installed correctly.

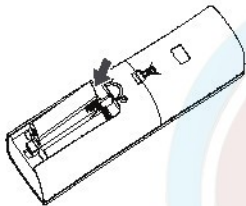

- 3 Reattach the battery cover.

#### NOTE


If the display screen of the remote control starts to fade, replace the batteries.

### Installing the remote control holder


Install the holder where there is no direct sunlight to protect the remote control.

- 1 Choose a safe and easily-accessible place.

- 2 Fix the holder by fastening the 2 screws firmly with a screwdriver.

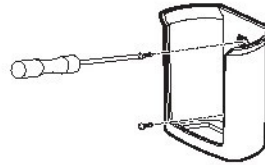

 - 3 Slide the remote control into the holder.



### Operating method

Point the remote control towards the signal receiver at the bottom of the air conditioner to operate it.





 
#### NOTE


- The remote control may operate other electronic devices if pointed towards them. Make sure to point the remote control towards the signal receiver of the air conditioner.
- For proper operation, use a soft cloth to clean the signal transmitter and receiver.



## 10 BASIC FUNCTIONS

## BASIC FUNCTIONS

### Cooling your room (Cooling operation)

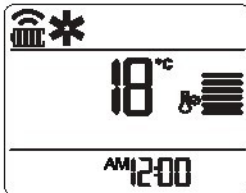
 

- 1 Press  to turn on the power.
- 2 Press  repeatedly to select the cooling operation.  
-  is displayed on the display screen.




- 3 Press  or  to set the desired temperature.  
- The temperature range is 18 °C (64 °F) ~ 30 °C (86 °F).




### Removing humidity (Dehumidifying operation)


This mode removes excess moisture from an environment with high humidity or in the rainy season, in order to prevent mold from setting in. This mode adjusts the room temperature and the fan speed automatically to maintain the optimal level of humidity.

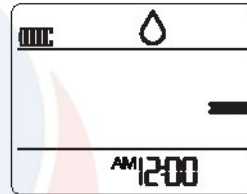

- 1 Press  to turn on the power.
- 2 Press  repeatedly to select the dehumidifying operation.  
-  is displayed on the display screen.



### Heating your room (Heating operation)

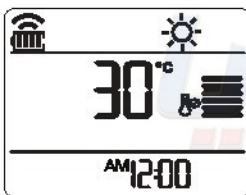- 1 Press  to turn on the power.
- 2 Press  repeatedly to select the heating operation.  
-  is displayed on the display screen.



- 3 Press  or  to set the desired temperature.  
- The temperature range is 16 °C (60 °F) ~ 30 °C (86 °F).

#### NOTE

- In this mode you cannot adjust the room temperature, as it is adjusted automatically. Also, the room temperature is not displayed on the display screen.


#### NOTE

Cooling-only models do not support this function.

## Airing your room (Air Circulation operation)

This mode only circulates the indoor air without changing the room temperature.

- 1 Press to turn on the power.
- 2 Press repeatedly to select the air circulation operation.  
- is displayed on the display screen.

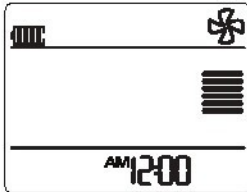

- 3 Press to adjust the fan speed.

## Adjusting the fan speed

- 1 Press repeatedly to adjust the fan speed.  
- Select if you want natural air.  
The fan speed adjusts automatically.

Display Screen		Speed
Remocon	Indoor unit	
	F5	High
	F4	Medium-High
	F3	Medium
	F2	Medium-Low
	F1	Low
	Setting Temperature	Natural Wind

## Adjusting the air flow direction

- 1 To adjust the direction of the air flow horizontally, press repeatedly and select the desired direction.  
- Select to adjust the direction of the air flow automatically.
- 2 To adjust the direction of the air flow vertically, press repeatedly and select the desired direction.  
- Select to adjust the direction of the air flow automatically.

### NOTE

- Adjusting the air flow direction vertically may not be supported, depending on the model.
- Adjusting the air deflector arbitrarily may cause product failure.
- If you restart the air conditioner, it starts to operate with the previously set direction of air flow, so the air deflector may not match the icon displayed on the remote control. When this occurs, press or to adjust the direction of the air flow again.

## Setting the timer

You can use the timer function to save energy and to use the air conditioner more efficiently.

### Setting the current time

- 1 Press and hold it for longer than 3 seconds.  
- The AM/PM icon flickers at the bottom of the display screen.



- 2 Press or to select the minutes.
- 3 Press to finish.

## 12 BASIC FUNCTIONS

**Turning on the air conditioner automatically at a set time**

 
- 1 Press **[ON]**.  
- The icon below flickers at the bottom of the display screen.



- 2 Press **[↓]** or **[↑]** to select the minutes.
- 3 Press **[SET/CLEAR]** to finish.
- 4 When setting the timer, current time and ON icon are displayed on the display screen indicating that the desired time is set.

**Turning off the air conditioner automatically at a set time**

- 1 Press **[OFF]**.  
- The icon below flickers at the bottom of the display screen.



- 2 Press **[↓]** or **[↑]** to select the minutes.
- 3 Press **[SET/CLEAR]** to finish.
- 4 When setting the timer, current time and OFF icon are displayed on the display screen indicating that the desired time is set.

**Canceling the timer setting**

- 1 Press **[ON]** or **[OFF]** to select the timer setting to cancel.
- 2 Press **[SET/CLEAR]**.  
- To cancel all timer settings, press **[SET/CLEAR]**.

**Setting sleep mode**

Use the sleep mode to turn off the air conditioner automatically when you go to sleep.

- 1 Press **[SLEEP]** to turn on the power.
- 2 Press **[SLEEP]**.
- 3 Press **[↓]** or **[↑]** to select the hour (up to 7 hours).
- 4 Press **[SET/CLEAR]** to finish.  
- **[SLEEP]** is displayed on the display screen in sleep mode.  
\* Example) 1 Hr  
[Display screen]      [Indoor unit display]

**NOTE**



- In the Cooling and Dehumidifying modes, the temperature increases by 1 °C after 30 minutes and by a further 1 °C after another 30 minutes for a more comfortable sleep.
- The temperature increases with up to 2 °C from the preset temperature.
- Fan speed can't be changed in case of sleep mode. Super low fan speed is set up at cooling and low fan speed is set up at heating.

## ADVANCED FUNCTIONS

The air conditioner offers some additional advanced functions.

### Changing room temperature quickly (Jet Cool/Heat operation)

This mode allows you to cool indoor air quickly in summer or warm it quickly in winter.

- 1 Press  to turn on the power.
- 2 Press .



- In jet cooling mode, strong air blows out at a temperature of 18 °C (64 °F) for 30 minutes.
- In jet heating mode, strong air blows out at a temperature of 30 °C (86 °F) for 30 minutes.



#### NOTE


- In Air Circulation, Auto, or Auto Changeover mode, this function cannot be used.
- This function may not be supported, depending on the model.


### Indoor air purification

#### Auto Clean operation (optional)

In the cooling and dehumidifying operations, moisture is generated inside the indoor unit. Use the auto cleaning function to remove such moisture.

- 1 Press  to turn on the power.
- 2 Press .

-  is displayed on the display screen.

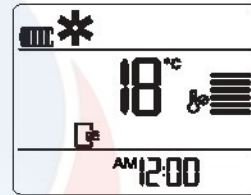

- If you turn off the power, the fan operates for 30 minutes and cleans the inside of the indoor unit.
- The plasmaster ionizer also operates to purify and sterilize inside of the indoor unit during auto clean operation.

#### NOTE




Some buttons cannot be used while the auto cleaning function is in operation.





## 14 ADVANCED FUNCTIONS

**Plasmaster Purification operation (optional)**

Ion particles from Ionizer developed by LG sterilize the aerial bacteria and other harmful substances.



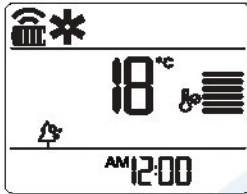


- 1 Press  to turn on the power.
- 2 Press .
  -  is displayed on the display screen.


**NOTE**


- You can use this function by pressing  without turning the air conditioner on.
- This function may not be supported, depending on the model.
- Do not touch ionizer during operation.

**Auto Changeover operation**

This function changes the operation mode automatically to maintain the set temperature at  $\pm 2$  °C.

- 1 Before power on, keep pressing  button more than 5 seconds.
  - Then Auto Changeover function becomes activated.
  -  is displayed on the display screen.
- 2 Press  to turn on the power.
- 3 Press  button repeatedly to select the Auto Changeover operation.
  -  is displayed on the display screen.

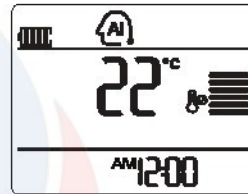**NOTE**

 - If you do not want to use this function, turn off the power and then keep pressing Mode button more than 5 seconds again.
  -  is displayed on the display screen.
- When you input reset button or change the battery, Auto Changeover function becomes deactivated.
- Cooling-only models do not support this function.

## Energy saving cooling mode

This mode minimizes power consumption during cooling and increases the set temperature to the optimal level for a more comfortable environment. The temperature automatically sets at 22 °C if room ambient temperature is below 22 °C. The temperature maintains if ambient temperature is above 22 °C.

- 1 Press to turn the power on.
- 2 Press repeatedly to select the cooling operation.
- 3 Press button.  
- is displayed on the display screen.



### NOTE

- This function may not be supported, depending on the model.

## Display screen brightness

You can adjust the brightness of the indoor unit display screen.

- 1 Press .  
Turn on/off the Display screen.

### NOTE

- This function may not be supported, depending on the model.

## Using the Comfort air (Comfort Vane operation)

The comfort vane option conveniently sets the vane to a preset position that deflects the supply air away from blowing directly onto room occupants.

- 1 Press to turn on the power.
- 2 Press repeatedly and select the desired direction.  
- or is displayed on the display screen.

[Display screen]

[Indoor unit display]



[Display screen]

[Indoor unit display]



### NOTE

- Pressing or during comfort vane operation will turn off the comfort vane feature.
- Pressing during comfort vane operation will turn off the comfort vane feature and set up the auto swing of vertical direction.
- When this feature is off, the horizontal vane operates automatically depending on the set mode.

## 16 ADVANCED FUNCTIONS


**Operating the air conditioner without the remote control**

You can use the On/Off button of the indoor unit to operate the air conditioner when the remote control is unavailable. However, the fan speed is set to high.

- 1 Open the Horizontal vane.
- 2 Press the On/Off Button.

**NOTE**

The stepping motor can be broken, the Horizontal vane open rapidly.

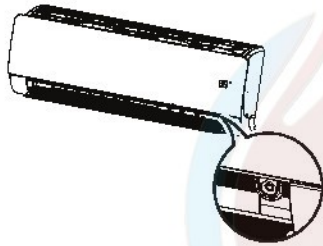

\* The feature can be changed according to type of model.

- For cooling and heating models, the operation mode changes, depending on the room temperature.

Room temp.	Set temp.	Operation mode
Below 21 °C	24 °C	Heating operation
Above 21 °C and below 24 °C	23 °C	Dehumidifying operation
Above 24 °C	22 °C	Cooling operation


- For cooling-only models, the temperature is set to 22 °C.

**Restarting the air conditioner automatically**

When the air conditioner is turned on again after a power failure, this function restores the previous settings. This function is a factory default setting.

**Disabling auto restart**

- 1 Open the Horizontal vane.
- 2 Press the On/Off button and hold it for 6 seconds.
  - The unit will beep twice and The lamp will blink twice 4 times

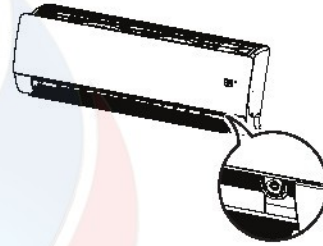

\* The feature can be changed according a type of model.

- To re-enable the function, press the On/Off button and hold it for 6 seconds. The unit will beep twice and the lamp will blink 4 times.

**NOTE**


If you press and hold the On/Off button for 3 – 5 seconds instead of 6 seconds, the unit will switch to the test operation. In the test operation, the unit blows out strong air for cooling for 18 minutes and then returns to the factory default settings.

## MAINTENANCE

If the air conditioner will not be used for an extended period of time, dry the air conditioner to maintain it in best condition.

- 1 Dry the air conditioner in Fan mode for 3 to 4 hours and disconnect the power plug. There may be internal damage if moisture is left in components.
- 2 Before using the air conditioner again, dry the inner components of the air conditioner in Fan mode for 3 to 4 hours. This will help to remove odor which is generated from moisture.

Clean the product regularly to maintain optimal performance and to prevent possible breakdown.

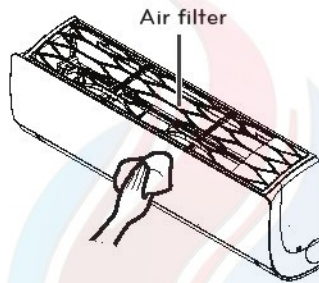

\* The feature can be changed according to the type of model.

Type	Description	Interval
Air filter	See "Clean the air filter".	2 weeks
Ionizer	See "Cleaning the ionizer".	6 months
Indoor unit	Clean the Indoor unit surface by using a soft, dry cloth.	Regularly
	Clean the condensate drain pipe.	Every 4 months
	Clean the condensate drain pan.	Once a year
	Thoroughly clean the heat exchanger.	Once a year
	Replace the remote control batteries.	Once a year
Outdoor unit	Use steam to clean the heat exchanger coils and the panel vents. (consult with technician)	Regularly
	Clean the fan.	Once a year
	Clean the condensate drain pan.	Once a year
	Verify that all the fan assembly is firmly tightened.	Once a year
	Verify that electric components with air.	Once a year
	Clean the electric components with air.	Once a year

## 18 MAINTENANCE

**Clean the air filter**


Clean the air filter once every 2 weeks or more if necessary.

- 1 Turn off the power and unplug the power cord.
- 2 Hold the knob of air filter, Lift it up slightly.



\* The feature can be changed according to type of model.

- 3 Hold the knob of the air filter, lift it up slightly and remove it from the unit.

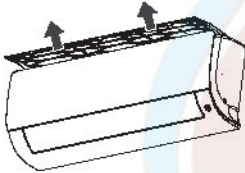

\* The feature can be changed according to type of model.

- 4 Clean the filter with a vacuum cleaner or with warm water.  
- If dirt is difficult to remove, wash the filter in lukewarm water with detergent.
- 5 Dry the filter in the shade.


**NOTE**

The air filter can be broken when it is bended.


**Assemble the air filter**

Clean the air filter once every 2 weeks or more if necessary.

- 1 Turn off the power and unplug the power cord.
- 2 Insert the hooks of the air filter into the front grille.

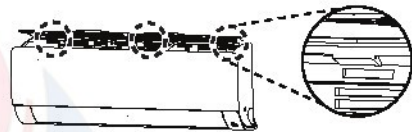

- 3 Push down hooks to assemble the air filter.

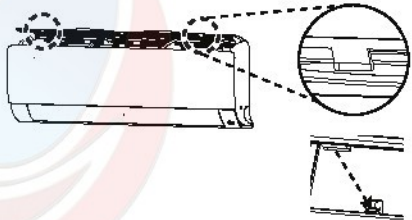

- 4 Check side of the front grille for the air filter assembled correctly.

**NOTE**


The air filter is not assembled correctly, Dust and other substance come into the indoor unit



Cleaning the Ionizer(Optional)

- Turn off the power and unplug the power cord.
- Use dry cotton bud to remove any dust.

Note : The ionizer may not be included in some models.

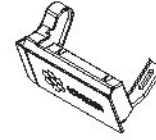

**!** CAUTION

- Turn off the power and unplug the power cord before you perform any maintenance; otherwise it may cause electric shock.
- Never use water that is hotter than 40 °C when you clean the filters. It may cause deformation or discoloration.
- Never use volatile substances when you clean the filters. They may damage the surface of the product.
- Do not wash the 3M filter with water, because the filter can be damaged(Optional)

**!** NOTE

- The location and shape of the filters may differ, depending on the model.
- Make sure to clean the heat exchanger coils of the outdoor unit regularly, as dirt collected in the coils may decrease the operational efficiency or increase energy costs.

دما پویا

## TROUBLESHOOTING

### Self-diagnosis function

This product has a built-in self-diagnosis function. If an error occurs, the lamp of the indoor unit will blink in 2 second intervals. If this occurs, contact your local dealer or service center.

### Before requesting service

Please check the following before you contact the service center. If the problem persists, contact your local service center.

Problem	Possible causes	Corrective action
There is a burning smell and a strange sound coming from the unit.		Turn off the air conditioner, unplug the power cord and contact the service center.
Water leaks from the indoor unit even when the humidity level is low.		
The power cord is damaged or generating excessive heat.		
A switch, a circuit breaker (safety, ground) or a fuse is not operated properly.		
The air conditioner does not work.	The air conditioner is unplugged.	Check whether the power cord is plugged into the outlet.
	A fuse is blown or the power supply is blocked.	Replace the fuse or check if the circuit breaker has tripped.
	A power failure has occurred.	Turn off the air conditioner when a power failure occurs. When the power is restored, wait for 3 minutes, and then turn on the air conditioner.
	The voltage is too high or low.	Check if the circuit breaker has tripped.
	The air conditioner turned off automatically at a preset time.	Press the power button again.

Problem	Possible causes	Corrective action
The air conditioner does not generate cool air.	Air is not circulating properly.	Make sure that there are no curtains, blinds or furniture blocking the front of the air conditioner.
	The air filter is dirty.	Clean the air filter once every 2 weeks. See "Cleaning Air Filter" for more information.
	The room temperature is too high.	In summer, it may take some time to cool indoor air. In this case, select the jet cool operation to cool indoor air quickly.
	Cold air is escaping from the room.	Make sure that no cold air is escaping through ventilation points in the room.
	The desired temperature is higher than the set temperature.	Set the desired temperature to a level lower than the current temperature.
	There is a heating source nearby.	Avoid using a heat generator such as an electric oven or a gas burner while the air conditioner is in operation.
	Air circulation operation is selected.	In the air circulation operation, air blows from the air conditioner without cooling or heating the indoor air. Switch the operation mode to the cooling operation.
It is not possible to adjust the fan speed.	The auto operation, jet operation or dehumidifying operation is selected.	In some operation modes, such as the jet or dehumidifying operation modes, you cannot adjust the fan speed. Select an operation mode in which you can adjust the fan speed.
It is not possible to adjust the temperature.	The air circulation operation or jet operation is selected.	In some operation modes, such as the air circulation or jet operation mode, you cannot adjust the temperature. Select an operation mode in which you can adjust the temperature.

