

Instruction Manual of Air Purifier



دماپویا


Please read this Instruction Manual thoroughly before use and keep for future reference.
Please remove the Filter's packaging before use.

Safety Precautions


Thank you for choosing the air purifier, and please read the following safety precautions carefully before use, to ensure safe use.

Safe Placement


Please read the following correct placement methods, thus avoiding failure in the use process.

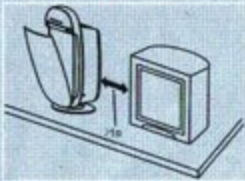

1. Please keep this machine at least 1 meter away from televisions, radios and other appliances.

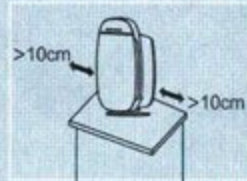

2. Please keep this machine over 10cm away from the wall on the left and right.

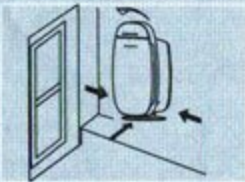

3. Please place this machine in a place facilitating air circulation.



4. Please do not place this machine in a place easy to hit the curtain.

Prohibitions

1. Part-time personnel or unauthorized repair personnel are not allowed to repair or modify this machine.
2. It is forbidden to operate with wet hands, to avoid electric shock damage.
3. It is not allowed to clean, maintain and move this machine in the charged case.
4. Please do not insert foreign objects in the inlet and outlet, to prevent accidental injury or damage to the machine under the premise of a high-speed rotating wind wheel's being built herein.
5. Please do not use this machine in an environment with flammable and explosive gas, and avoid long-time direct sunlight.
6. It is not suitable for such places as a bathroom with high humidity and vulnerable to water, to avoid electric shock.
7. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
8. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
Children should be supervised to ensure that they do not play with the appliance.


Tip:

1. Please do not put this machine in a tilted or unstable place, to avoid falling and thereby causing damage to the body or internal parts.
2. Please do not use this machine in such an environment as a kitchen with oil fume; after all, this machine is not designed against fume and oil filtration.
3. This machine is suitable for indoors rather than outdoors.



Product introduction

Parts description

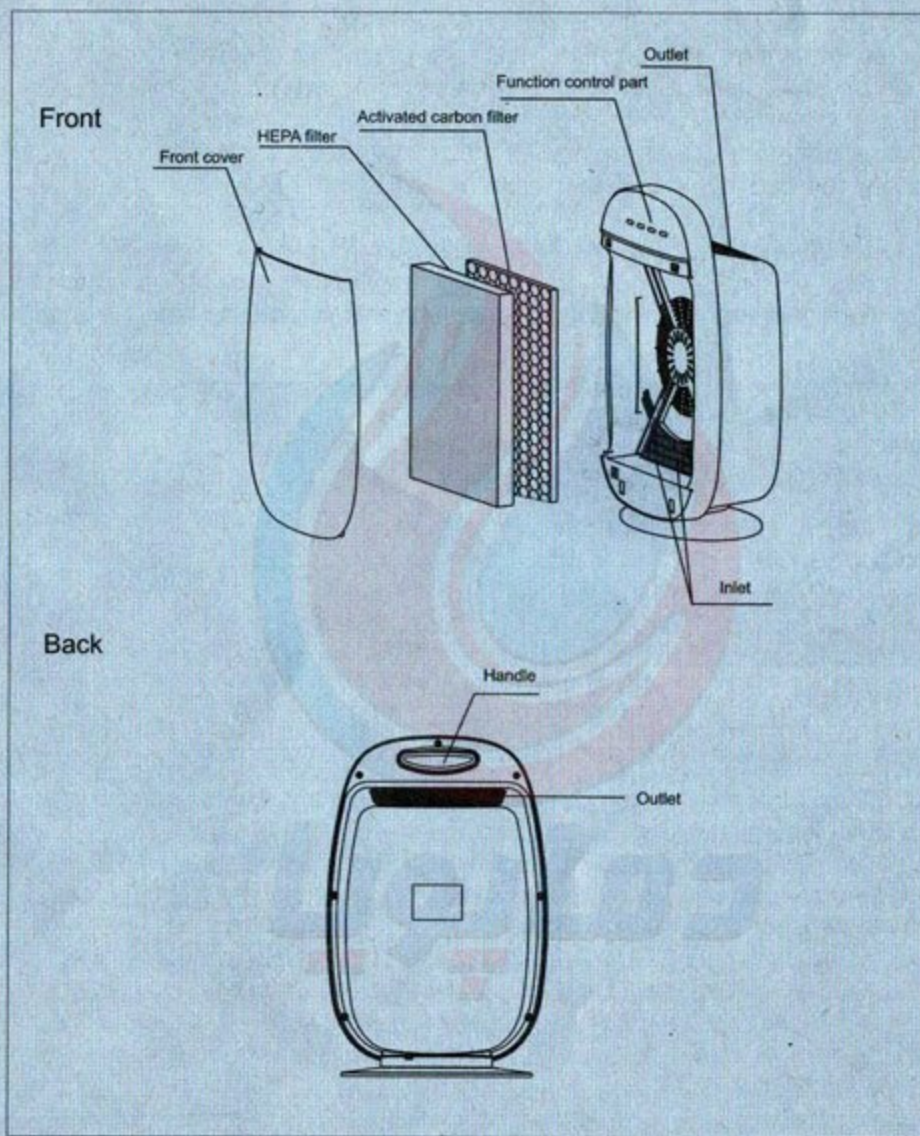

Note: Please be subject to the real object when installing, and the diagram is for reference only.



CAUTION

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play the appliance. Cleaning and user maintenance shall not be made by children without supervision. (be applicable for the European Countries)
- This appliance is not intended for use by persons (including children) with reduced physical ,sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. (be applicable for other countries except the European Countries)
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service
- Prior to cleaning or other maintenance, the appliance must be disconnected from the supply mains.
- This appliance contains a UV emitter. Do not stare at the light source. (be applicable for the appliance with UV light)





Product introduction

Instructions for Use

Installation Method

Note: Please disconnect the power when installing the filter element. Please recognize the front and back of the filter element and avoid wrong loading.


1. Remove the panel, put the purifier upright, hold recession of the side panel with both hands, place towards your own direction gently and pull out the front panel. Lift the bottom buckle and pull it out from the bottom. (As shown in Figure 1)
2. Remove the filter element, hold the drawstrings on both sides of the filter element with both hands and then pull outwards to remove the filter element. (As shown in Figure 2)
3. Remove the packing bag, open packing bag of the filter element, take out the new filter element from the bag (As shown in Figure 3), and then install according to the arrow direction indicated on the top of filter.
4. Install the panel by following the reverse order for disassembly. (As shown in Figure 4)

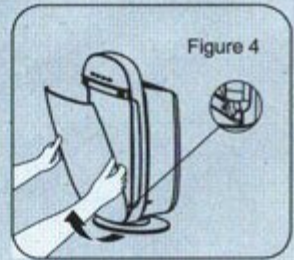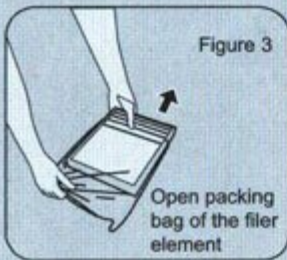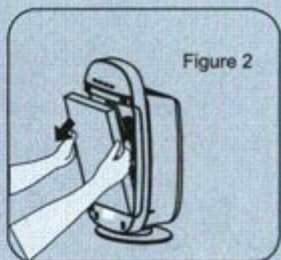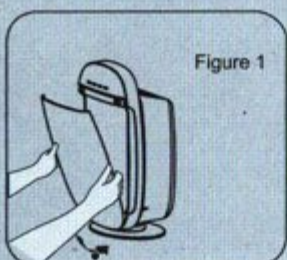

Product introduction

Instructions for Operating

Please refer to the following control panel icons and Use Manual before use.

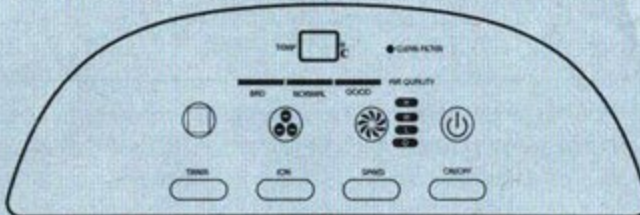

1. Connect the power

Please plug the power cord plug of the purifier into a power outlet and ensure good contact.
Note: Do not handle the plug with wet hands to avoid life-threatening electric shock. Always unplug when moving the machine.

2. ON/OFF

After pressing down the "ON/OFF" button, the purifier begins running and the display shows the operating status; while after repressing down the "ON/OFF" button, the purifier stops running.

3. Timer

After the "Timer" button is pressed, 1-hour timing is displayed, press it again to increase by 1 hour, the longest for 8 hours.

4. Ion

After pressing down the "Ion" button, the anion generator begins to work and the anion indicator turns on; and after repressing, the anion is cancelled and the anion indicator turns off.

5. Cleaning filter

After 720 hours of operation the clean filter indicator lights up, in suggests that the filter should be cleaned; after the "Ion" button is held for 3 seconds, the timer resets, and the indicator lights off.

6. Odor Sensor Sensitivity Adjustment

You can adjust odor sensor sensitivity according to the location and the actual needs.

1. Long press the "Speed" button at the "Standby" state, and then the air speed indicator turns on in turn.

2. Release the button after reaching the required sensitivity.

Note:

1. The "Big, Medium and Small" of the odor sensitivity intensity correspond to the "High, Medium and Low" of the air speed indicator in turn;

2. Upon initial use and re-plugging of the power cord, the default state of the product is "Medium";

3. Consumers may adjust the sensitivity according to the actual situation.

7. Speed

The default is the low wind, which can be switched correspondingly according to the number of presses.

Number of Presses	Wind Status
Press once, twice or 3 times	Respectively medium, high and mute wind
Press 4 times	Low

Tips:

Low wind and medium wind are suitable for common cases; and it is recommended to use high wind when booting or there is especially poor indoor air quality.

Product introduction

8. Air Quality Indicator

The "Odor Sensor" in the machine detects pollutants in the air, and prompts them through the indicator.

Blue light - GOOD Orange light - NORMAL Red - BAD

Note:

After turning on, the first 3 minutes shall be warm-up time of the sensor, the machine can not detect air quality in the three minutes but shall enter the actual test state after the completion of three minutes of warm-up, and the test results are for reference only.

Tips:

The machine uses an odor sensor which is sensitive to hydrogen, carbon monoxide, methane, odor, ethyl alcohol, etc. but insensitive to formaldehyde gas, etc., does not support the detection to dust, pollen and other particles, but does not affect the purifying effect of the above pollutants.

9. Tips

In the work process, in case the power turns off, the machine will automatically remain at the work status before power failure in the next boot; in case of unexpected power failure, the machine will return to the default state in the next boot.

Note: The above icon is a schematic, and for specific function, see the detailed text description.

Cleaning and Maintenance

Note:

1. Always unplug before cleaning and maintenance, and make sure the machine without energization.
2. Please recognize front and back of the filter element and avoid wrong loading.


Daily Cleaning



1. Use a soft dry cloth to clear Regularly use a soft dry cloth to wipe off dust on the body as well as in the inlet and outlet, to prevent dust accumulation.



2. HEPA filter cleaning After the filter cleaning indicator turns on, use a duct catcher or brush to clean the HEPA filter.

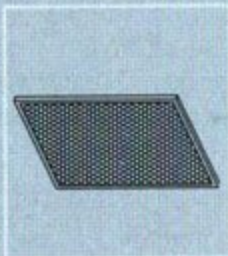

3. Activated carbon filter After the filter cleaning indicator is bright, you can take out activated carbon function filter, and place it the sun to dry in order to restore its absorption features.

Precautions during HEPA filter cleaning

1. It is recommended to use a small soft brush or a household dust catcher.
2. Just clean the inlet surface rather than the back of the filter (except the filter frame).
3. When using a brush, keep horizontal brushing but avoid vertical brushing, so as not to damage the filter.
4. When using a dust catcher, maintain the exhaust inlet 5-10mm away from the filter surface, so as not to damage the filter.

Replace filter element

1. Filter replacement

The filter, a consumable product, may have slightly different service life in different environments; when the filter is damaged or can not achieve the filtration effect, it is recommended to replace the filter.

2. Unwashable filter element

3. Selection of matching filter element for replacement. In order to reduce unnecessary trouble, you can purchase this filter element from a dealer.

4. Steps to replace and install, please see the "Installation Method".

Fault Detection

Before requesting maintenance, please make appropriate checks by contrast with the chart below.

Symptom	Possible Cause	Possible Solution
The machine does not run	<ol style="list-style-type: none"> You do not plug in the power cord, or the power cord is in a bad contact. You do not turn on the power switch. 	<ol style="list-style-type: none"> Please plug in the power cord and make it in a good contact. Please press down the "ON/OFF" button on the panel to energize.
The fume and odor removal effect is poor	<ol style="list-style-type: none"> You install front and back of the filter element wrongly. The service life of the filter element reaches the end. The inlet is blocked by a foreign object. 	<ol style="list-style-type: none"> Make sure that the filter element is installed in a correct direction. Please replace the filter element. Please remove the foreign object in the inlet.

If the following occurs, please send for repairs.

- On account of improper running or running failure, the above handling methods do not work.
- The entry of foreign objects or water leads to abnormal running.

NOTE:

All the illustrations in the manual are for explanation purpose only. Your machine may be slightly different. The actual shape shall prevail.

The design and specifications are subject to change without prior notice for product improvement. Consult with the sales agency or manufacturer for details.



16157100000064